Installation Manual

KD Wall Style Adjustable


Z000000385 Released 11/30/16



Assembly

Step 1: Glide Assembly - Adjustable Wall Style Frame

a. Assemble a thread-in glide into the insert in each of the four (4) legs.

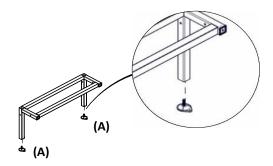


Step 2: Frame Assembly

a. Using $3/8"-16 \times 3 \ 3/4"$ hex head cap screw, 3/8-16 lock nut and 3/8" washers, assemble the seat support leg to the main support frame.

Note: Start with the Center holes and if needed can open or close the booth opening if needed.

b. Repeat step a with the second seat support leg.

c. Attach the cantilever to the main support frame using $1/4-20 \times 5/8$ " machine screws on the bottom. Use the $1/4-20 \times 3/4$ " hex head cap screws with a 1/4-20 kep nut on the top.

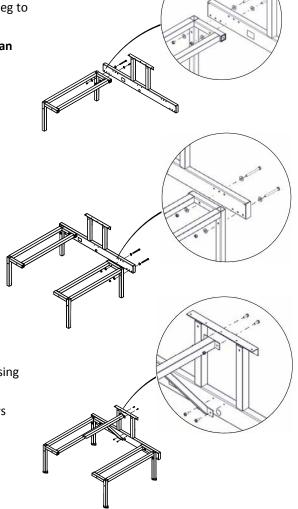



Web Plymold.com
Phone 800.PLYMOLD



Step 3: Fasten Glides to the Floor

- a. Rotate glides so that the mounting hole is pointing towards the center of the booth.
- b. With a pencil, mark the hole location on the floor using the holes in the glide.
- c. Turn the glide away 90 degrees from its current position to expose the mark on the floor.
- d. Using a hammer drill and a 1/4" masonry bit, drill a $1\,1/4$ " deep hole on the pencil mark.
- e. Place a plastic anchor in the hole and then rotate glide back so its hole lines up with the plastic anchor in the floor.

