
Installation Manual

INDUTRIAL FLAT BENCH

Z00000049

Revised 5/02/2023

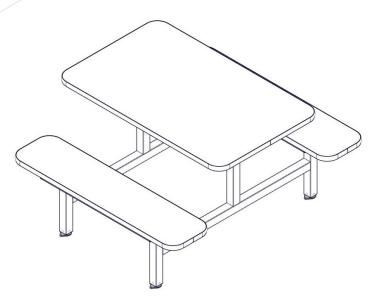


A Division of Foldcraft

Address 615 CENTENIAL DRIVE KENYON, MN 55946 Web Plymold.com Phone 800.PLYMOLD

Unpacking Your Shipment


Unpack and identify each component in each box that you received. If your shipment is missing parts, or too many parts were shipped, please contact Plymold.

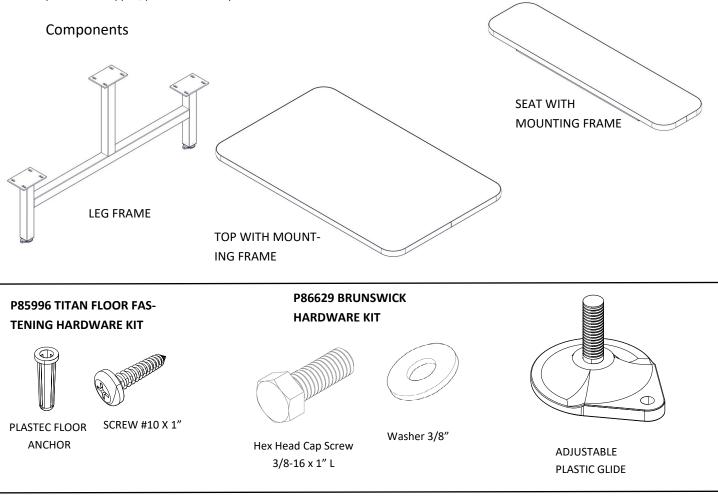

Assembly

Step 1: Glide Assembly - Leg Frame

a. Assemble a thread-in glide into the insert in each of the four (4) legs.

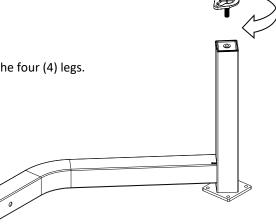





Web Plymold.com

Phone 800.PLYMOLD

Step 2: Assemble Seats and Top to Frames


a. Use 3/8-16 x 1" L Hex Head Cap Screws and 3/8" Washers to fasten the leg frames to the support frames already attached to the bottom of the seats and tops.





BOTTOM VIEW OF SEAT WITH SUPPORT FRAME ATTACHED

BOTTOM VIEW OF TOP WITH SUPPORT FRAME ATTACHED

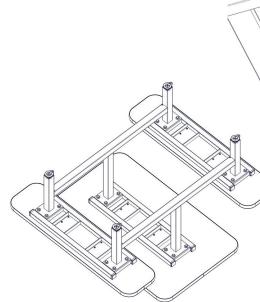

Step 3: Fasten Glides to Floor

- a. Rotate glides to point the mounting hole towards the center of the booth.
- b. With a pencil, mark the hole location on the floor using the holes in the glide.
- c. Turn the glide away 90 degrees from its current position to expose the mark on the floor.
- d. Using a hammer drill and a 1/4" masonry bit, drill a 1 1/4" deep hole on the pencil mark.
- e. Place a plastic anchor in the hole and then rotate glide back so the hole lines up with the plastic anchor in the floor.
- f. Insert a #10 x 1.0" screw through the hole in the glide and secure into the plastic anchor.

Note: Frames must be anchored to the floor to maintain stability and prevent personal injury.

Step 4: Care.

a. Clean furniture and protect unit until ready for use.



WebPlymold.comPhone800.PLYMOLD